


# WATERPROOF PROSEAL PLUG DEVICE

CONCRETE ON WOOD FORM  
FOR FLOORS OR WALLS

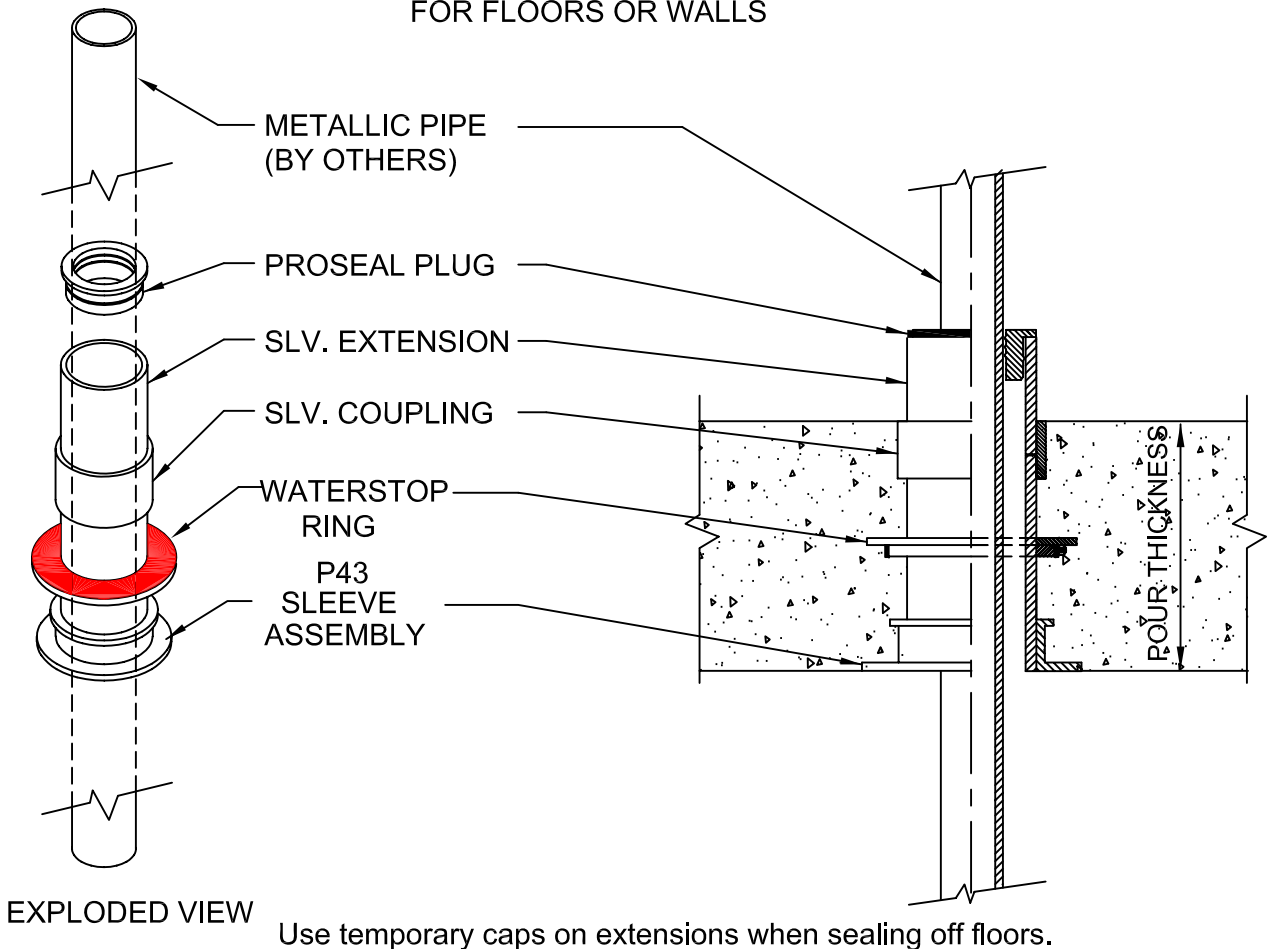

EXPLODED VIEW

Use temporary caps on extensions when sealing off floors.

## IMPORTANT NOTES :

1. Use nails through flange holes to mount the flange to the deck.
2. Solvent cement the sleeve assembly with the Ring, Coupling & Cap into the flange.
3. After concrete is poured, remove the protective cap that is flush with the finish floor.
4. Solvent cement the sleeve extension into the coupling to raise the sleeve above the floor.
5. Install the pass through pipe through the sleeve and the top extension.
6. Insert the proper size split ProSeal Plug around the pipe & drive into the top of the sleeve extension.

Important: See drawing A-1010-AC for alternate method



W.H. Directory Reference 99 Edition  
Firestop Device  
W.H. Design No. PS/PHV 120-03  
F Rating 2 Hrs. or 3 Hrs or 4 Hrs



**PROSET**<sup>®</sup>  
**SYSTEMS**  
FIRESTOP PENETRATOR™

DATE :

1-10-06

DRG . NO .

A-1010-ACR